

Apacer

AS2280F4 PCIe Gen5 x4 M.2 NVMe SSD

Quick Guide

English

繁體中文


簡體中文

Apacer provides a free dedicated M.2 SSD heatsink with special diversion cutting design to effectively reduce the PCIe 5.0 SSD temperature to maintain reading and writing performance at optimum levels.

This quick guide is guiding you how to assemble and disassemble the enclosed heatsink of Apacer AS2280F4 M.2 PCIe Gen5x4 SSD. Please check it carefully before you installed it to your device.

Contents


- ❶ AS2280F4 PCIe Gen5 x4 M.2 NVMe SSD x 1pcs
- ❷ Heatsink Top x 1pcs
- ❸ Heatsink Bracket x 1pcs
- ❹ Thermal Tape x 2pcs

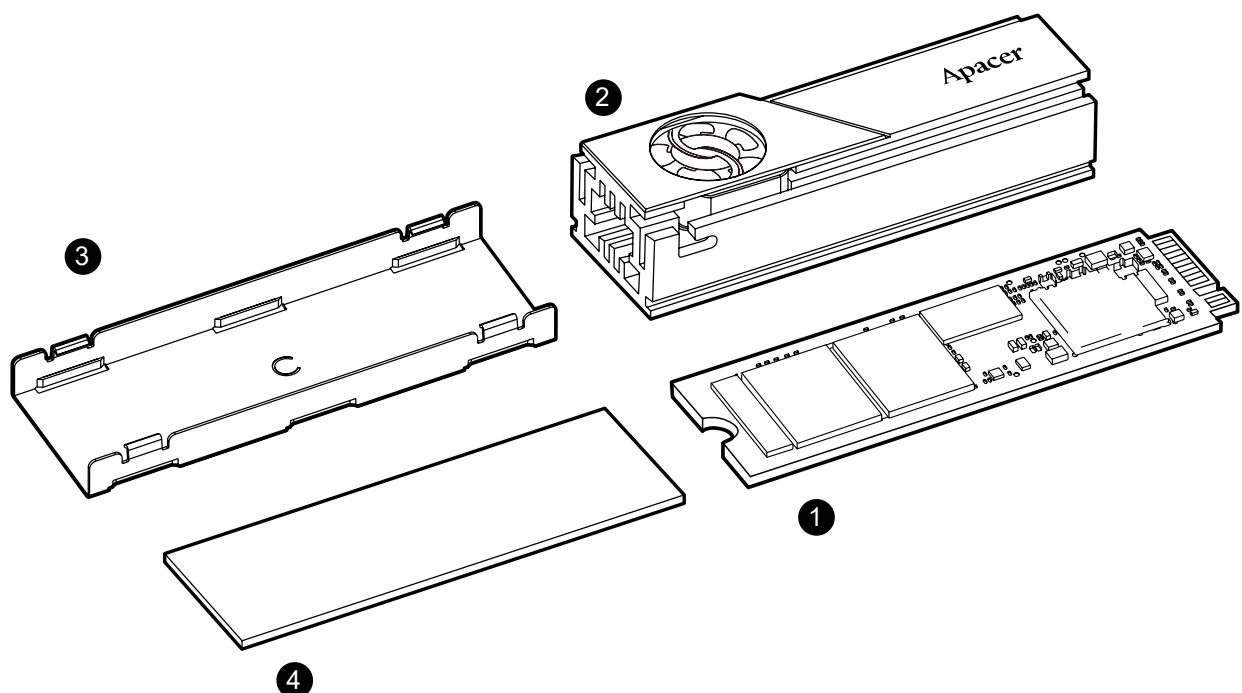

Assembly Procedure


Step 1 :

- 1 Tear off the release paper and affix the thermal adhesive to the m.2 SSD. Then tear off the other side of the release paper.
- 2 Carefully insert the m.2 SSD horizontally along the track in the bracket.

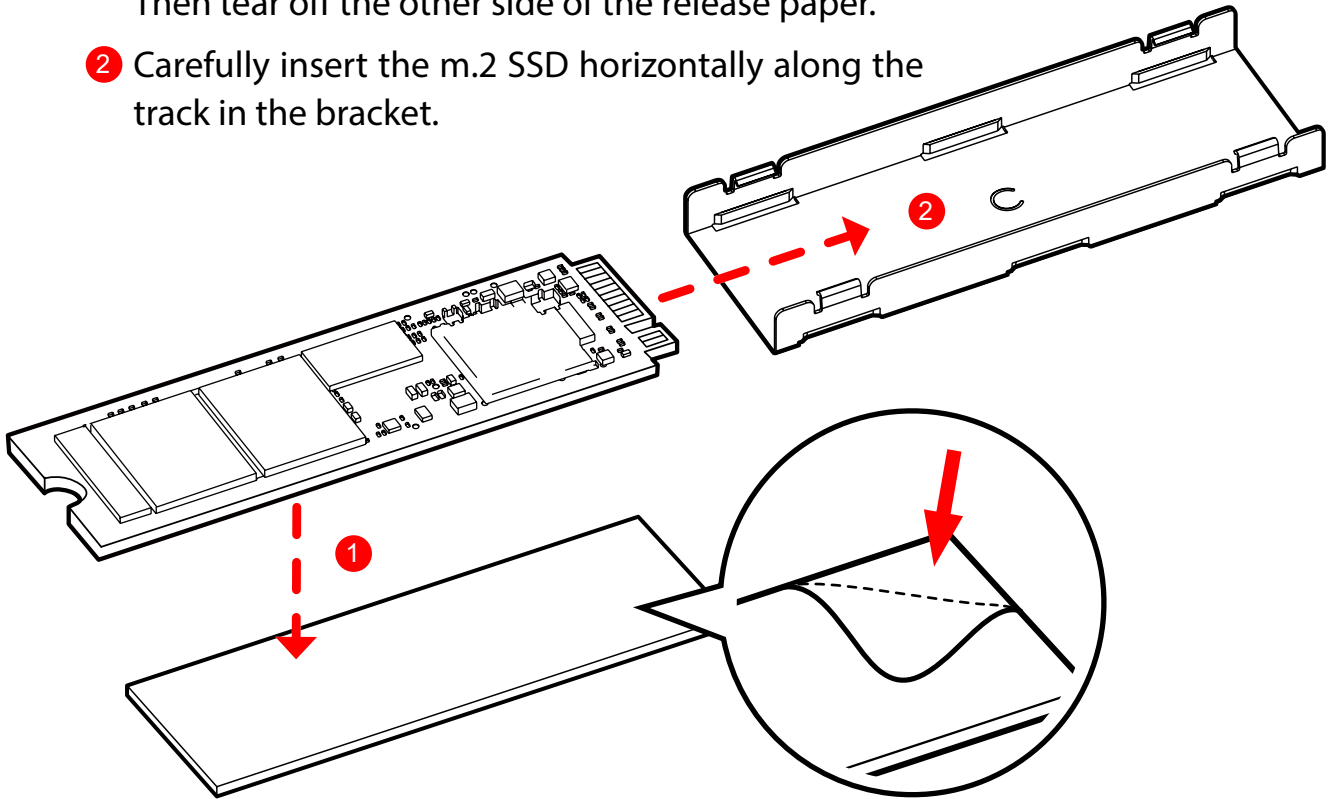


Step 2 :

After placing the m.2 SSD in the bracket, please checking if there is room for connector and half moon screw holes.

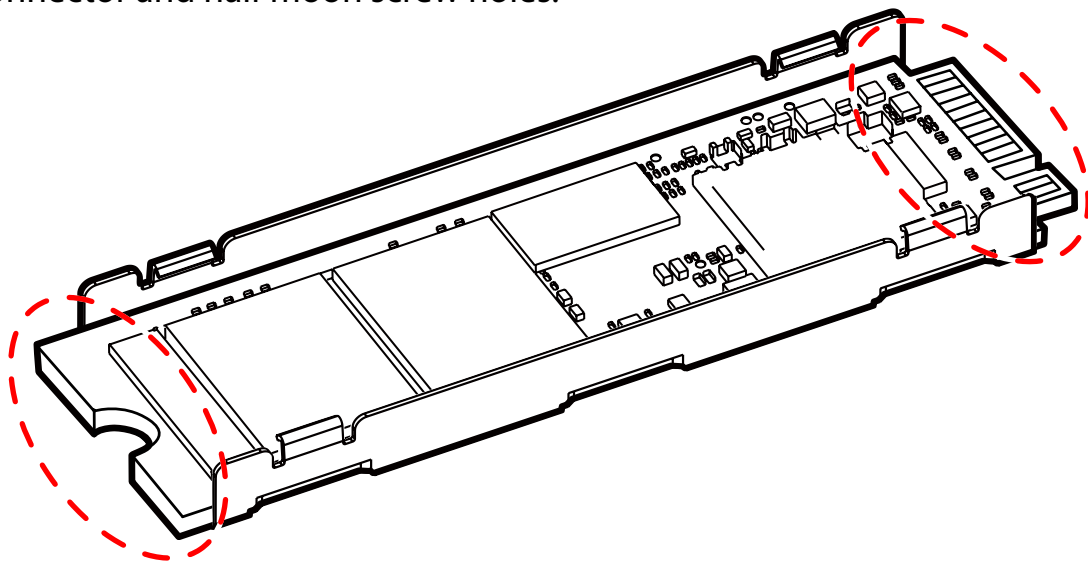


Step 3 :

Peel off the release paper and affix the thermal adhesive to the heat sink, then tear off the other side of the release paper and center the heat sink in place.

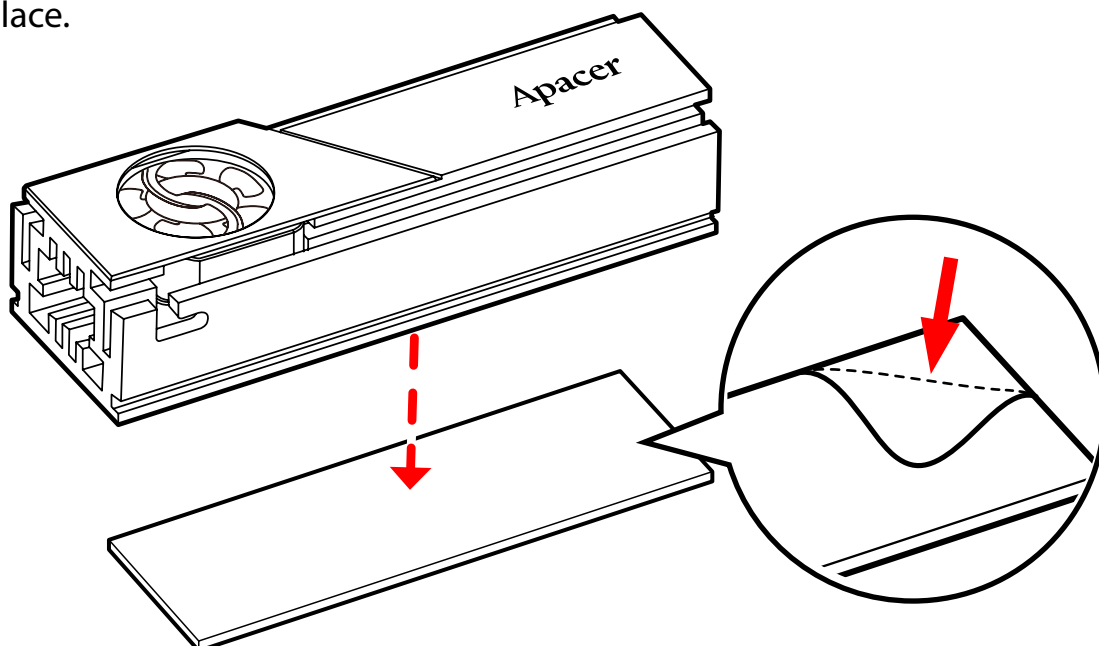


Step 4 :

Place the heatsink on the bracket and align it with one side. Put two fingers on both ends and press down with appropriate force. Press the heatsink into the latch of the bracket.

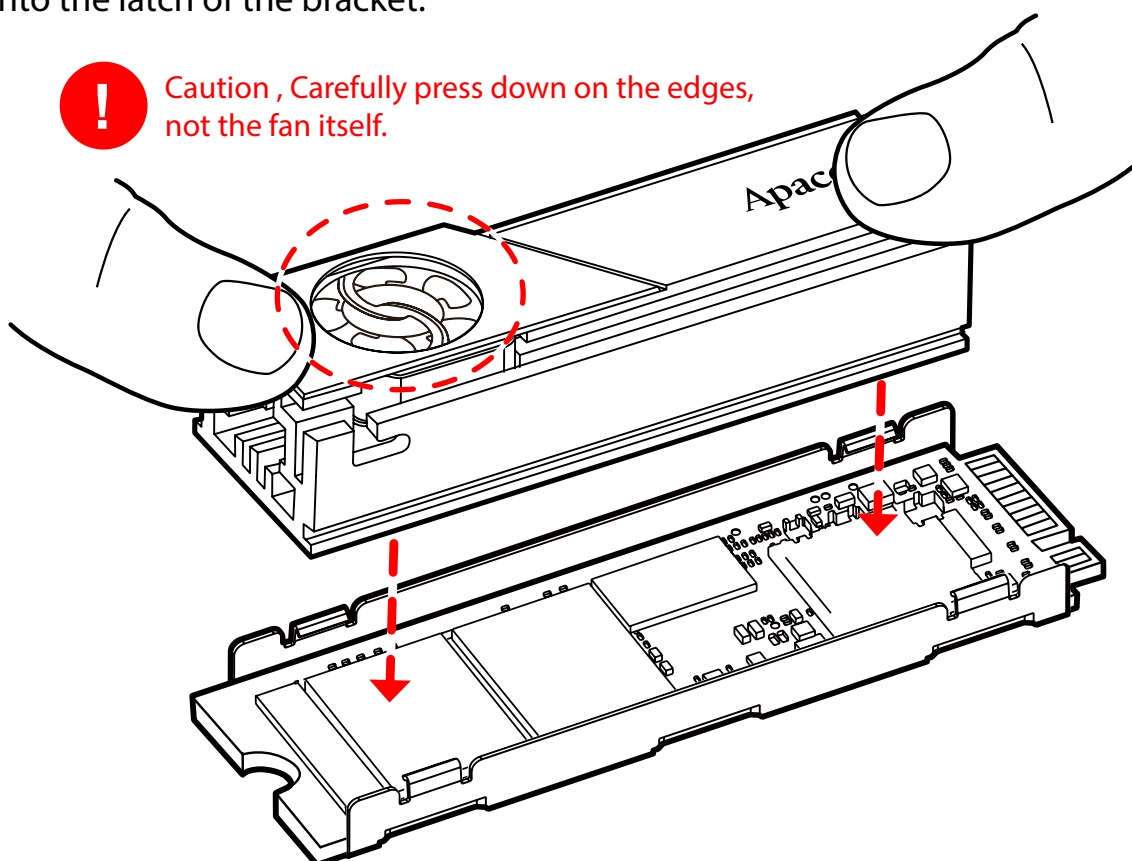

Step 5 :

Check if the heatsink is locked into the bracket and complete the assembly.

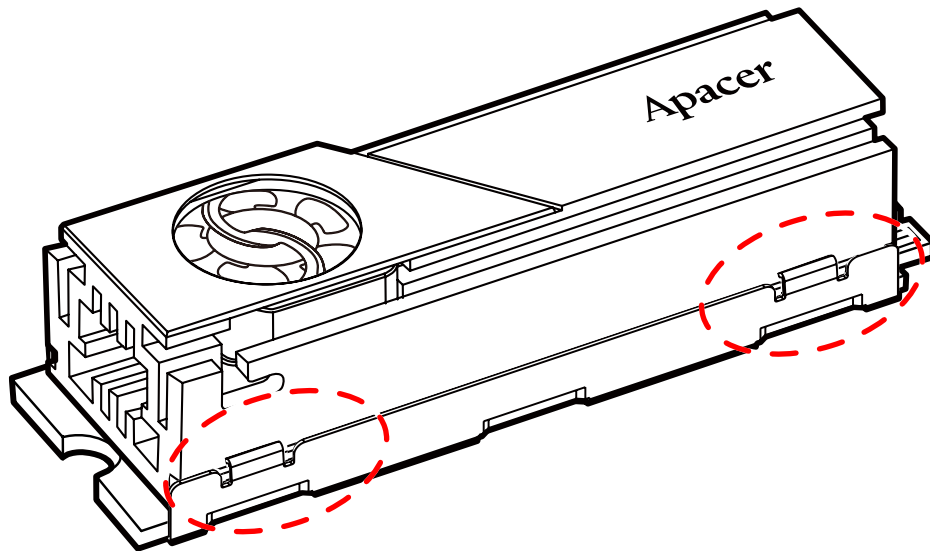


Assembly completed!

Disassembly Procedure


Step 1 :

Prepare a flathead screwdriver. Insert the flathead screwdriver into the one of the latch of the bracket.

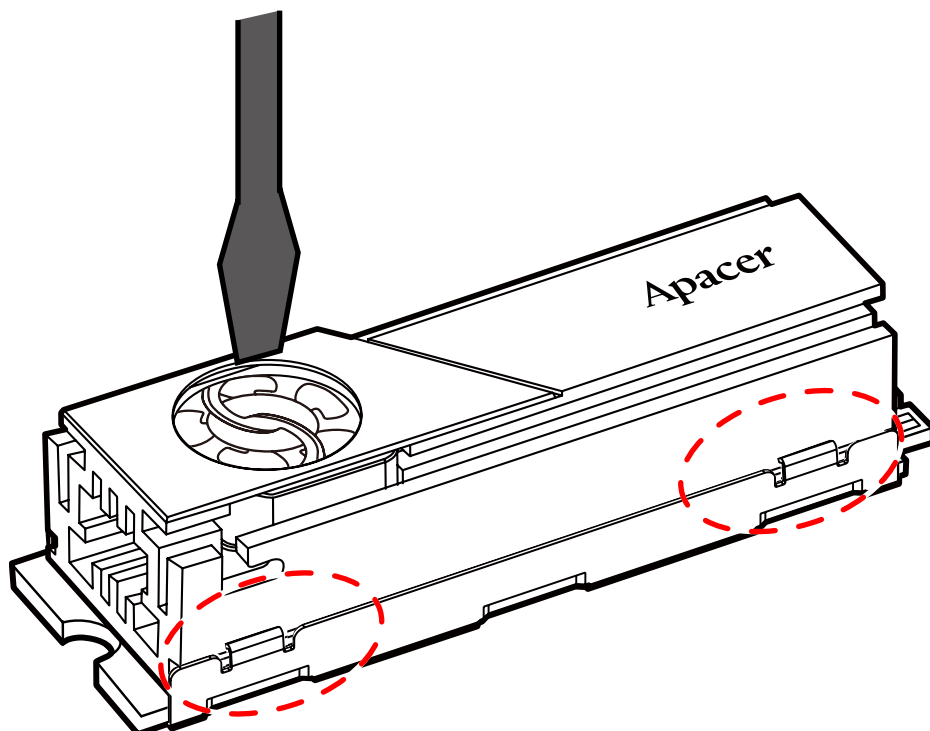


Step 2 :

Gently detach the latch of the bracket. Then you can detach another latch of the bracket.

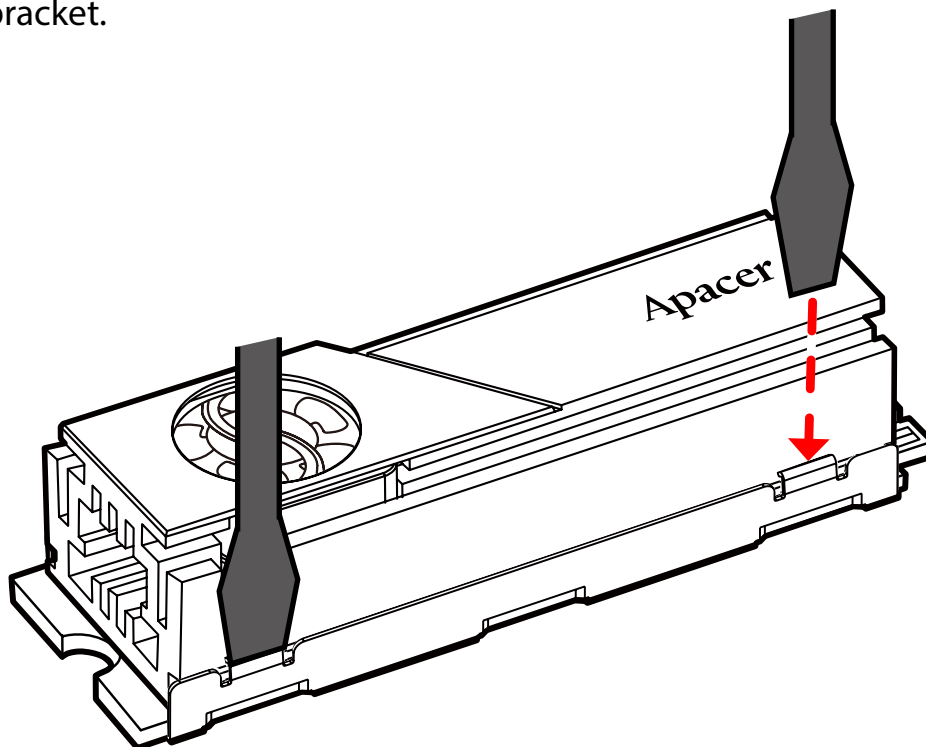

Step 3 :

After completing the previous steps, you can gently remove the heatsink from the bracket.

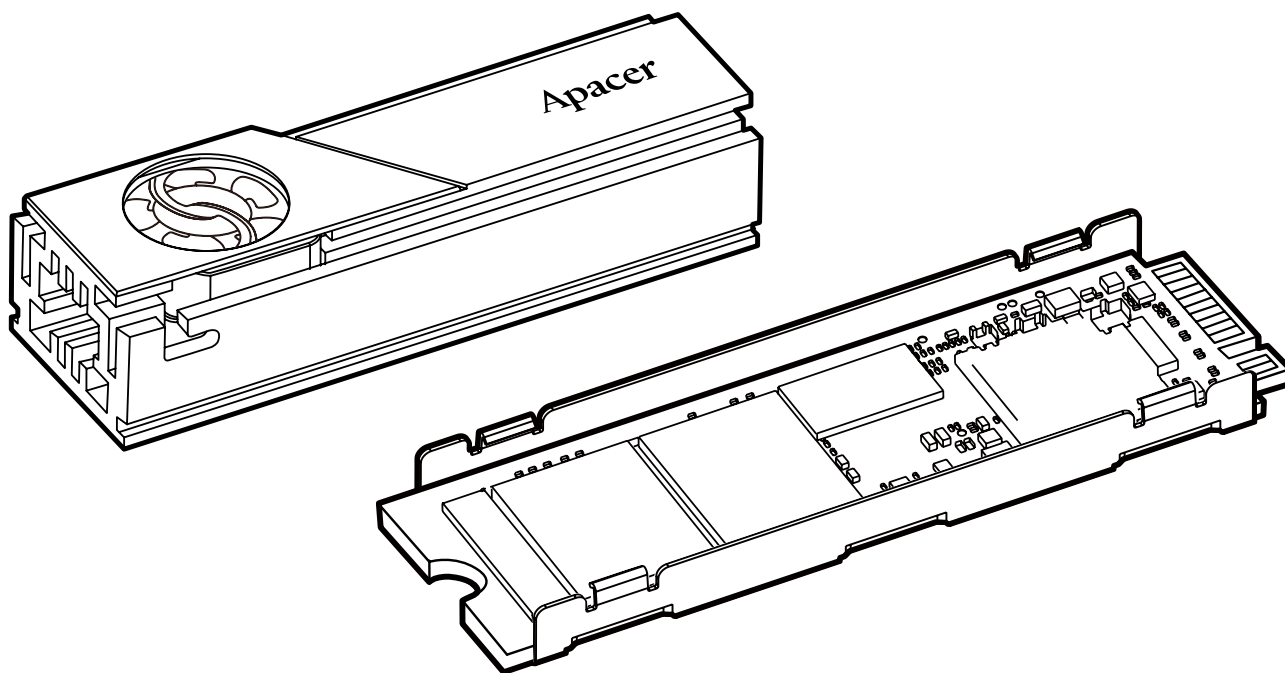

Disassembly completed!

*Notice: The enclosed heatsink is free without warranty.

*To ensure optimal product performance, please make sure to install the provided heat sink. Additionally, it is recommended to set the fan control to the maximum speed in the BIOS. This will help ensure that your SSD maintains its optimal performance during operation.


*Please install the heat sink correctly and maintain good ventilation inside the chassis to avoid using your computer under high temperatures.

宇瞻科技提供免費的 M.2 固態硬碟專屬散熱片，採特殊的分流切割設計，有效降低 PCIe 5.0 SSD 溫度，使其讀寫性能保持在最佳水準。

本快速指南將指導您如何組裝和拆卸 Apacer AS2280F4 M.2 PCIe Gen5 x4 SSD 的專屬散熱片。在將其安裝到您的設備之前，請仔細查閱。

內容


- ❶ AS2280F4 PCIe Gen5 x4 M.2 NVMe SSD x 1 個
- ❷ 散熱片頂部 x 1 個
- ❸ 散熱片支架 x 1 個
- ❹ 散熱膠帶 x 2 片

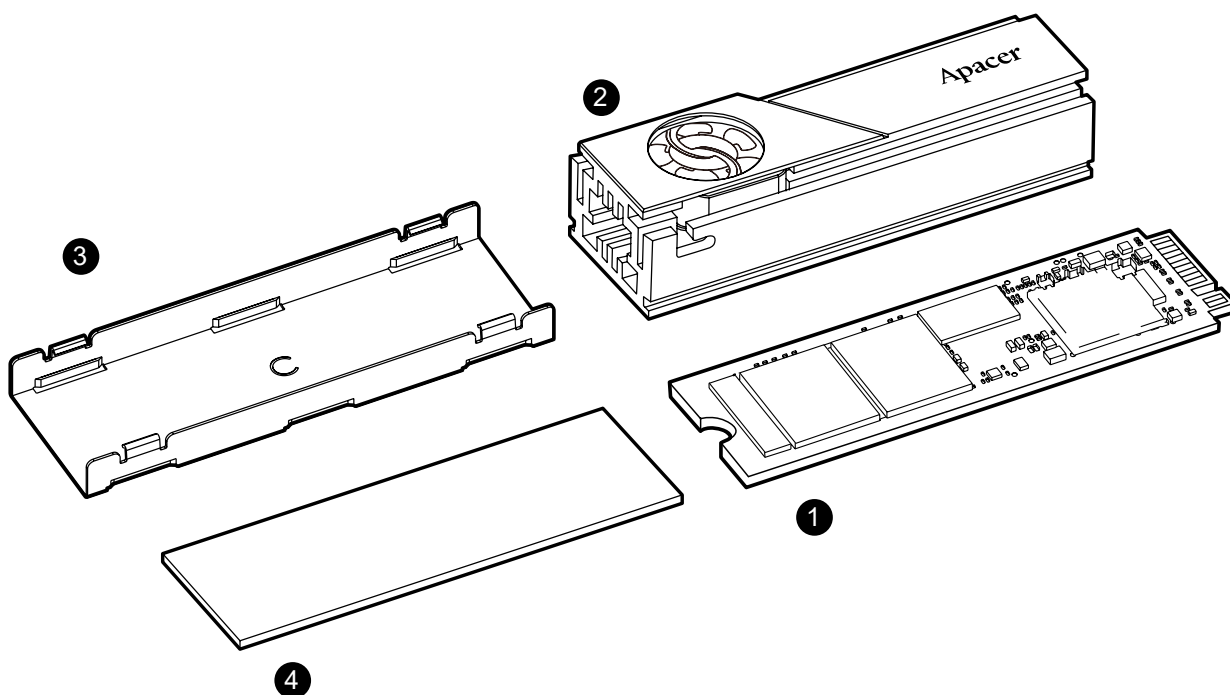

裝配程序


步驟 1：

- 1 撕下離型紙將散熱膠黏貼到 m.2 SSD 上，然後撕下另一面離型紙。
- 2 延著支架內的軌道水平插入 m.2 SSD。

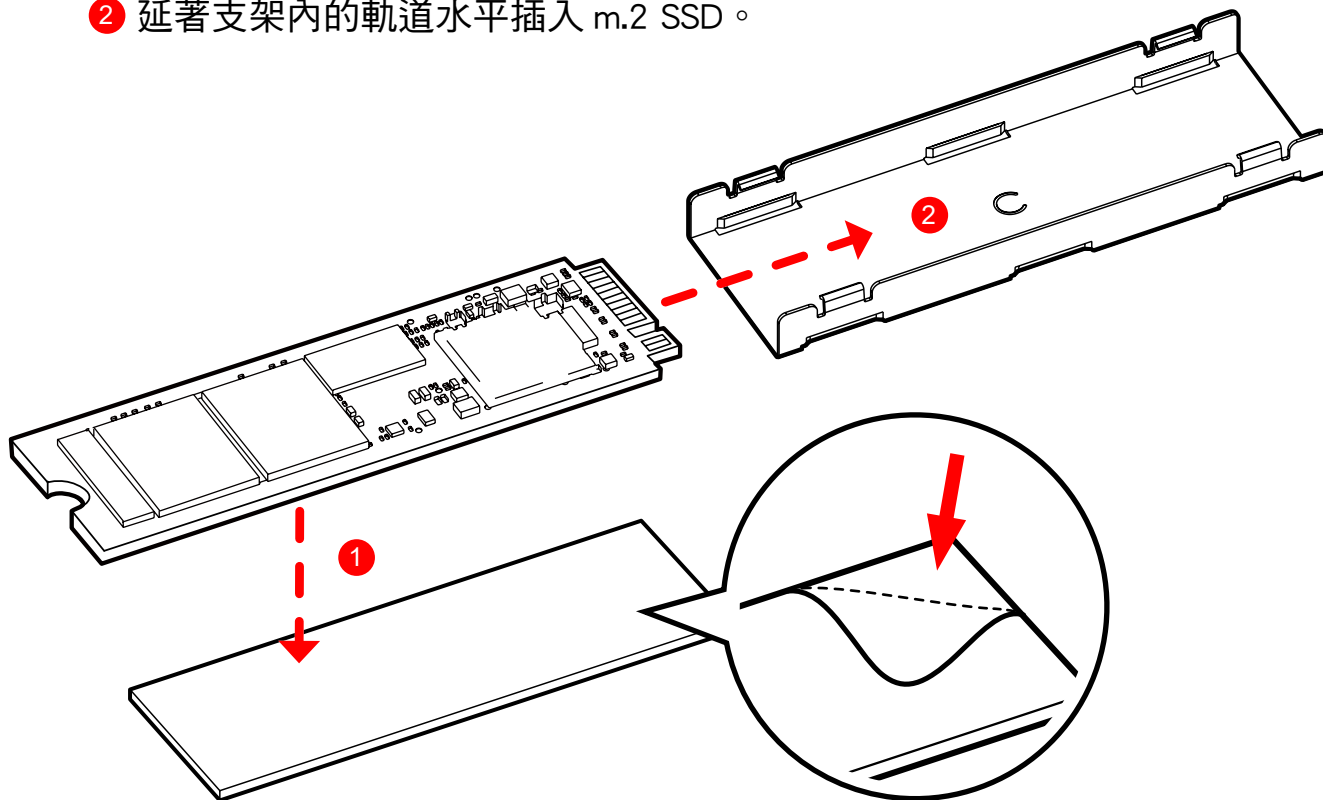


步驟 2：

將 m.2 SSD 放入支架後，請檢查是否有保留左右兩側連接器和半月螺絲孔的空間。

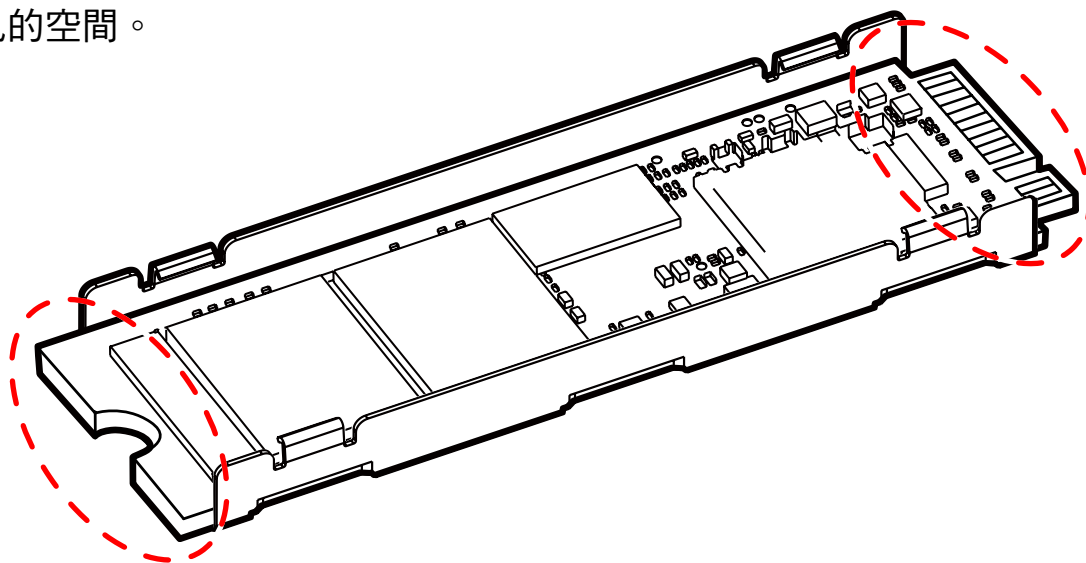


步驟 3：

撕下離型紙將散熱膠黏貼到散熱片上，然後撕下另一面離型紙以便固定散熱片。

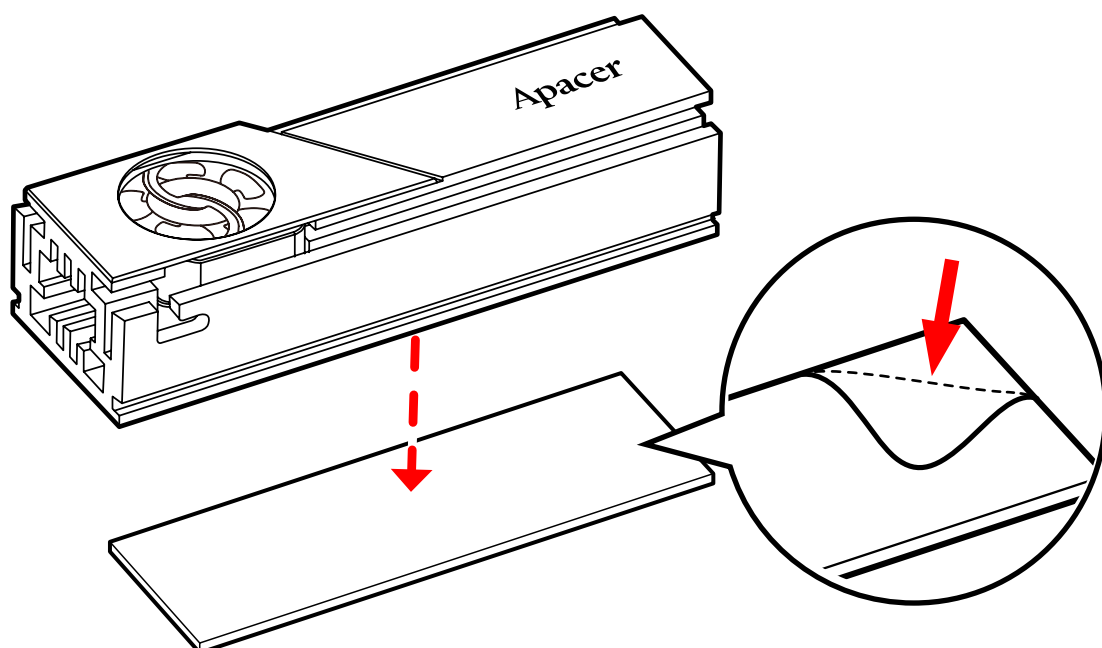


步驟 4：

將散熱片放在支架上並將其與一側對齊，運用兩根手指放在散熱片頂部兩端，並用適當的力按下，將散熱器按入支架的門鎖。

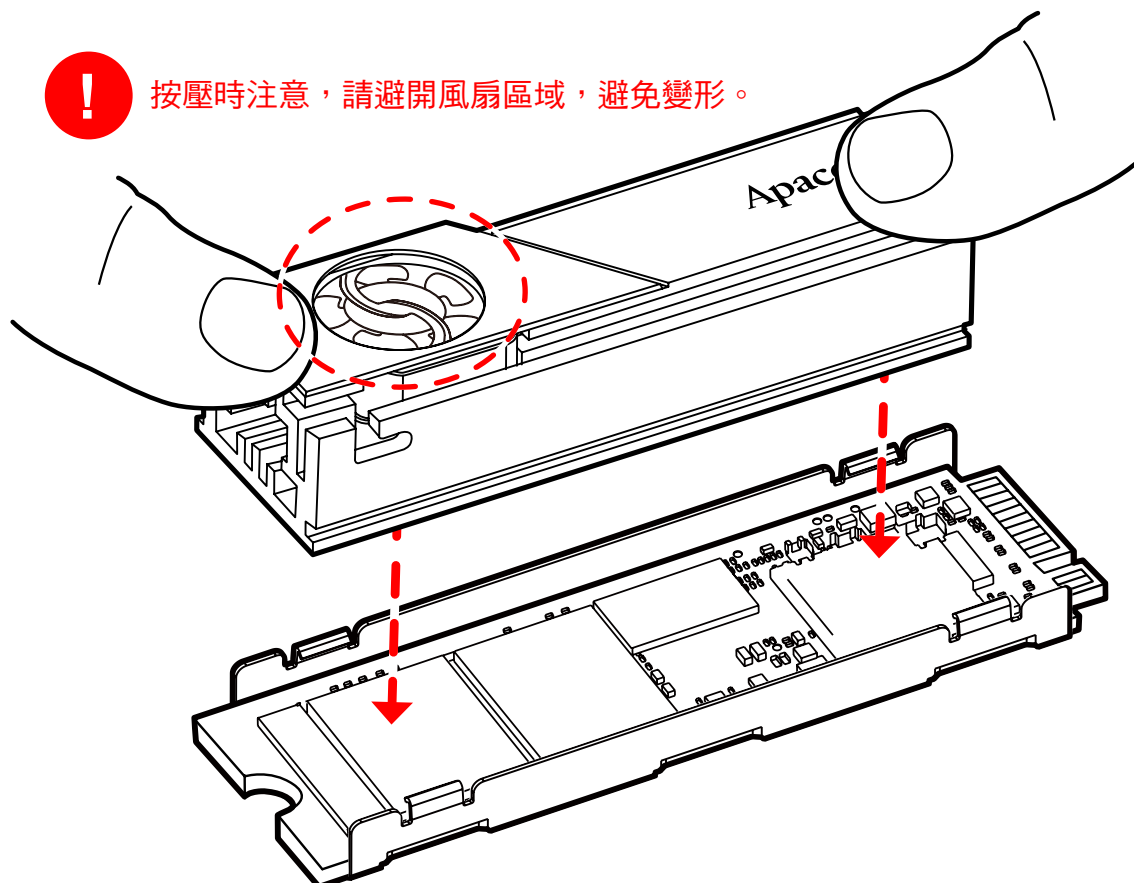

步驟 5：

檢查散熱片是否鎖定在支架中並完成組裝。

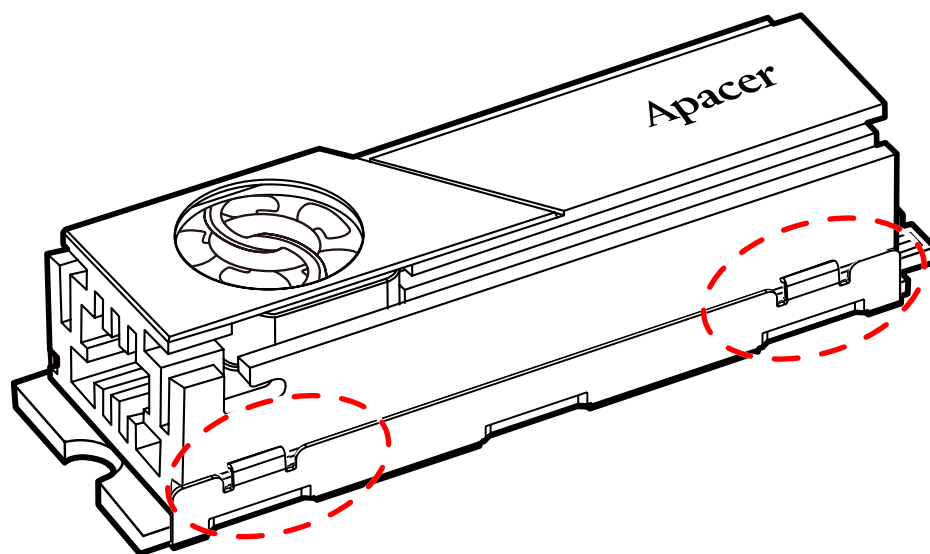


裝配完成！

拆卸程序


步驟 1：

準備一個平頭螺絲刀，將平頭螺絲刀插入支架的一個鎖扣中。

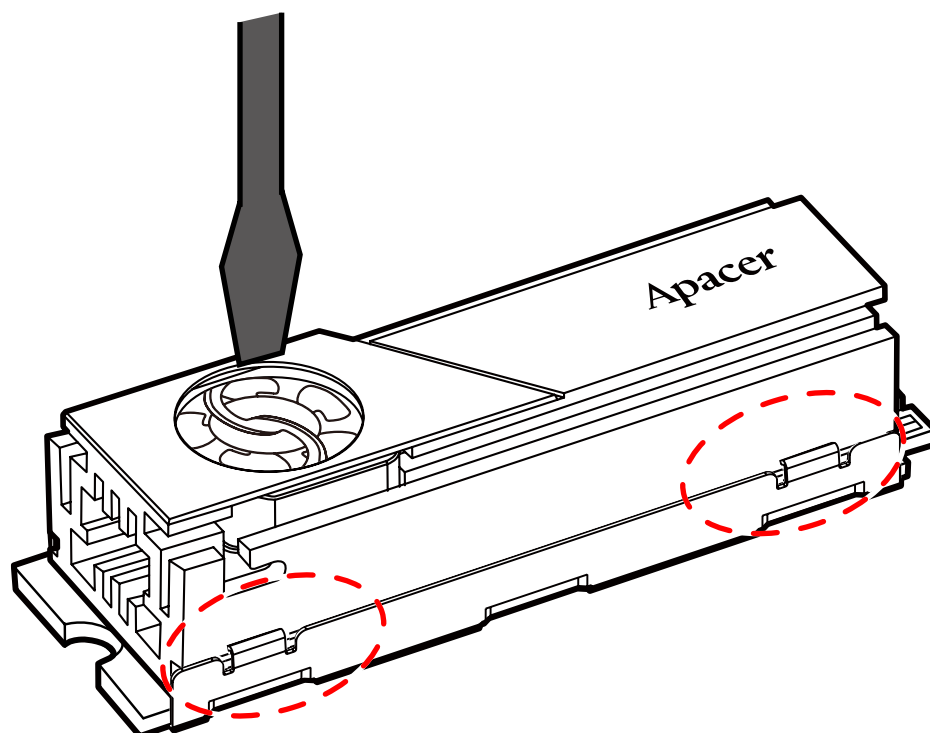


步驟 2：

輕輕地拆下支架的門鎖，然後就可以順著拆下支架的另一個門鎖。

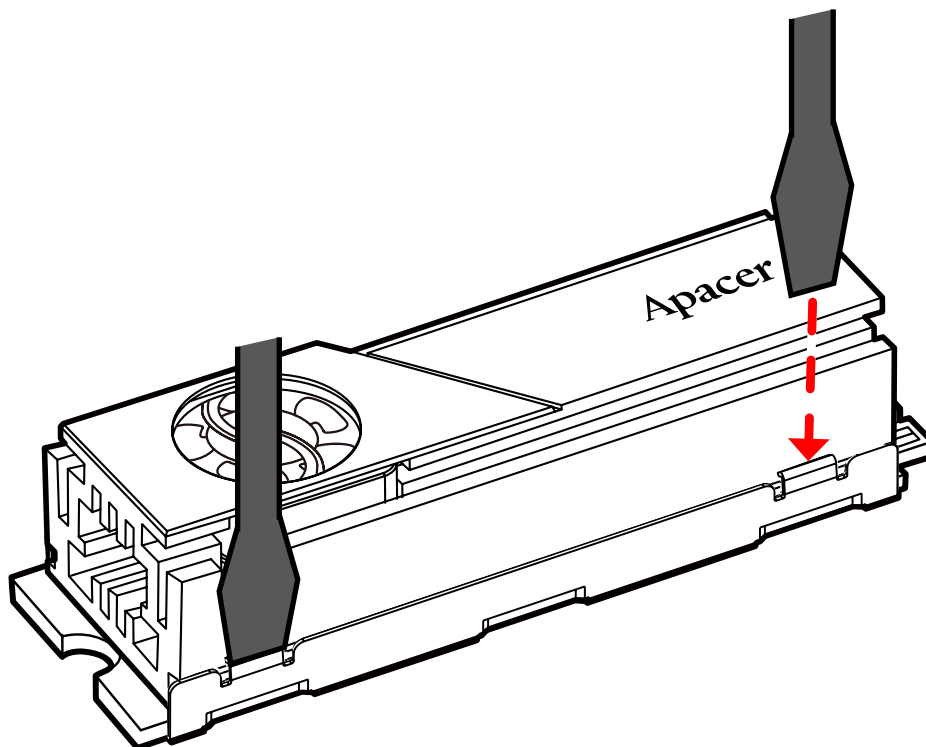

步驟 3：

完成前面的步驟後，您就可以輕輕地從支架上取下散熱片。

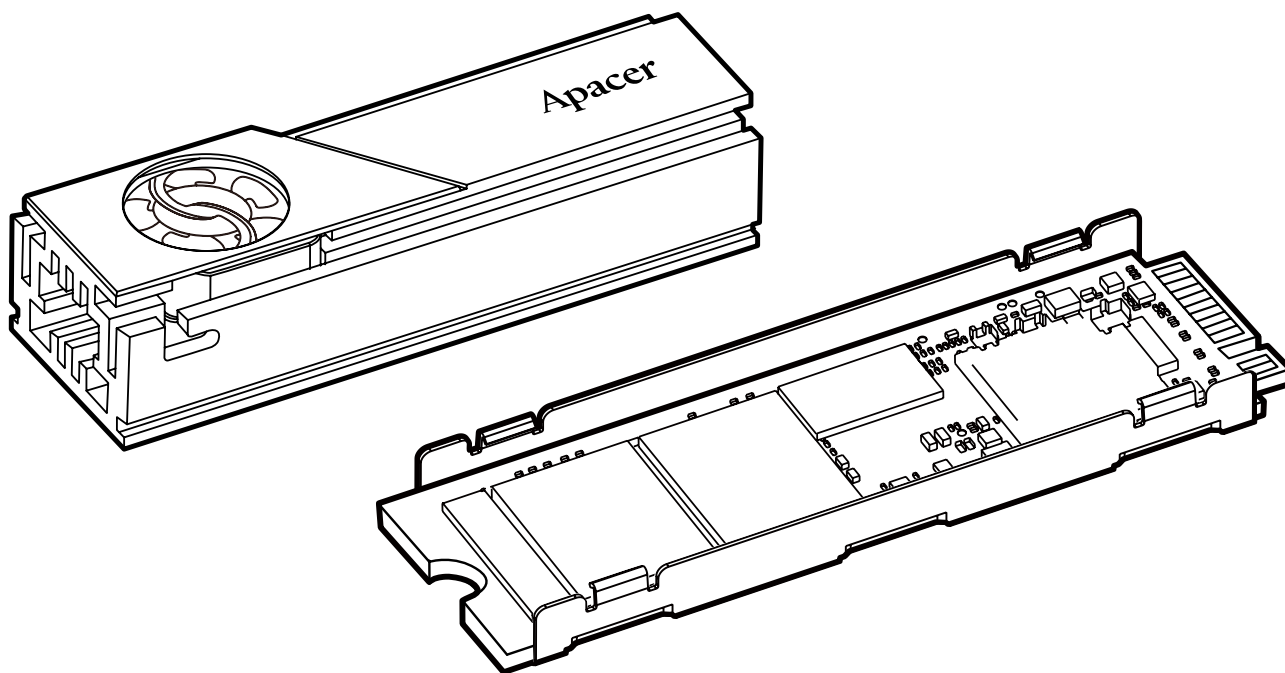

拆卸完成！


- * 請注意：隨附的散熱片是免費的，無提供保固。
- * 為確保產品達到最佳性能，請務必安裝隨附的散熱片。此外，建議在 BIOS 中將風扇控制設置為全速。這將有助於確保您的 SSD 保持最佳性能運行。
- * 請正確安裝散熱片，並保持機箱內的通風良好，避免在高溫下使用您的電腦。

宇瞻科技提供免费的 M.2 固态硬盘专属散热器，采特殊的分流切割设计，有效降低 PCIe 5.0 SSD 温度，使其读写性能保持在最佳水平。

本快速指南将指导您如何组装和拆卸 Apacer AS2280F4 M.2 PCIe Gen5 x4 SSD 的专属散热器。在将其安装到您的设备之前，请仔细查阅。

内容


- ❶ AS2280F4 PCIe Gen5 x4 M.2 NVMe SSD x 1 个
- ❷ 散热器顶部 x 1 个
- ❸ 散热器支架 x 1 个
- ❹ 散热胶带 x 2 片

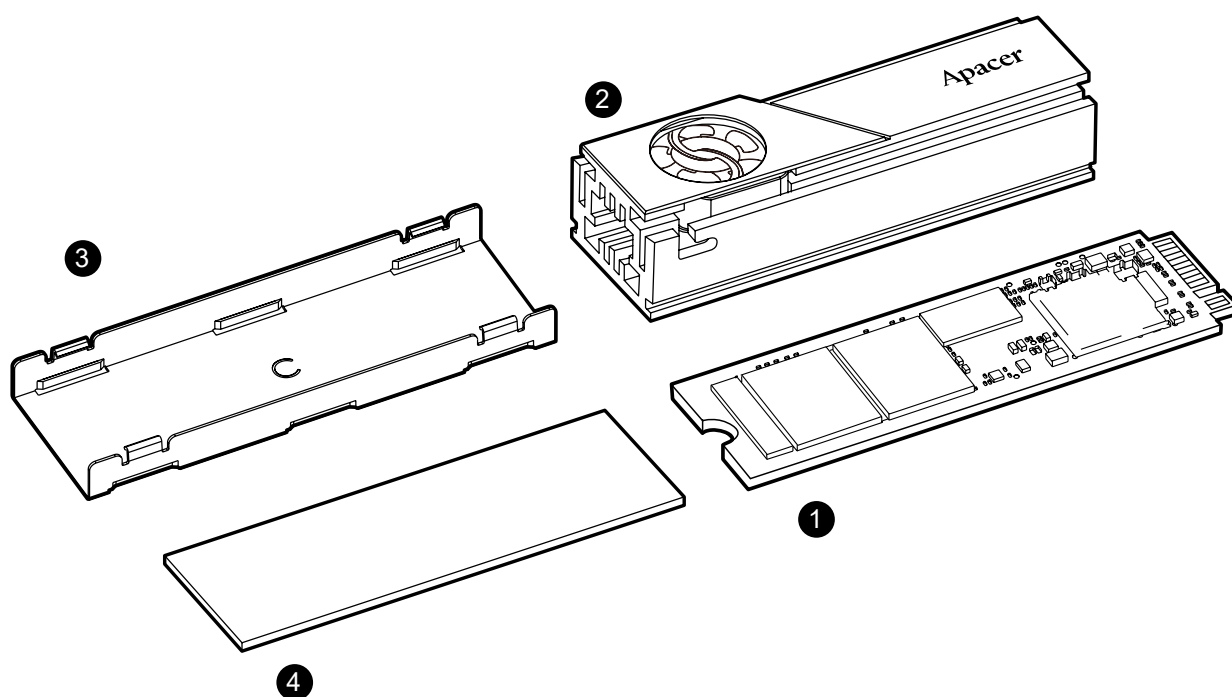

装配程序


步骤 1：

- ① 撕下离型纸将散热胶黏贴到 m.2 SSD 上，然后撕下另一面离型纸。
- ② 延着支架内的轨道水平插入 m.2 SSD。

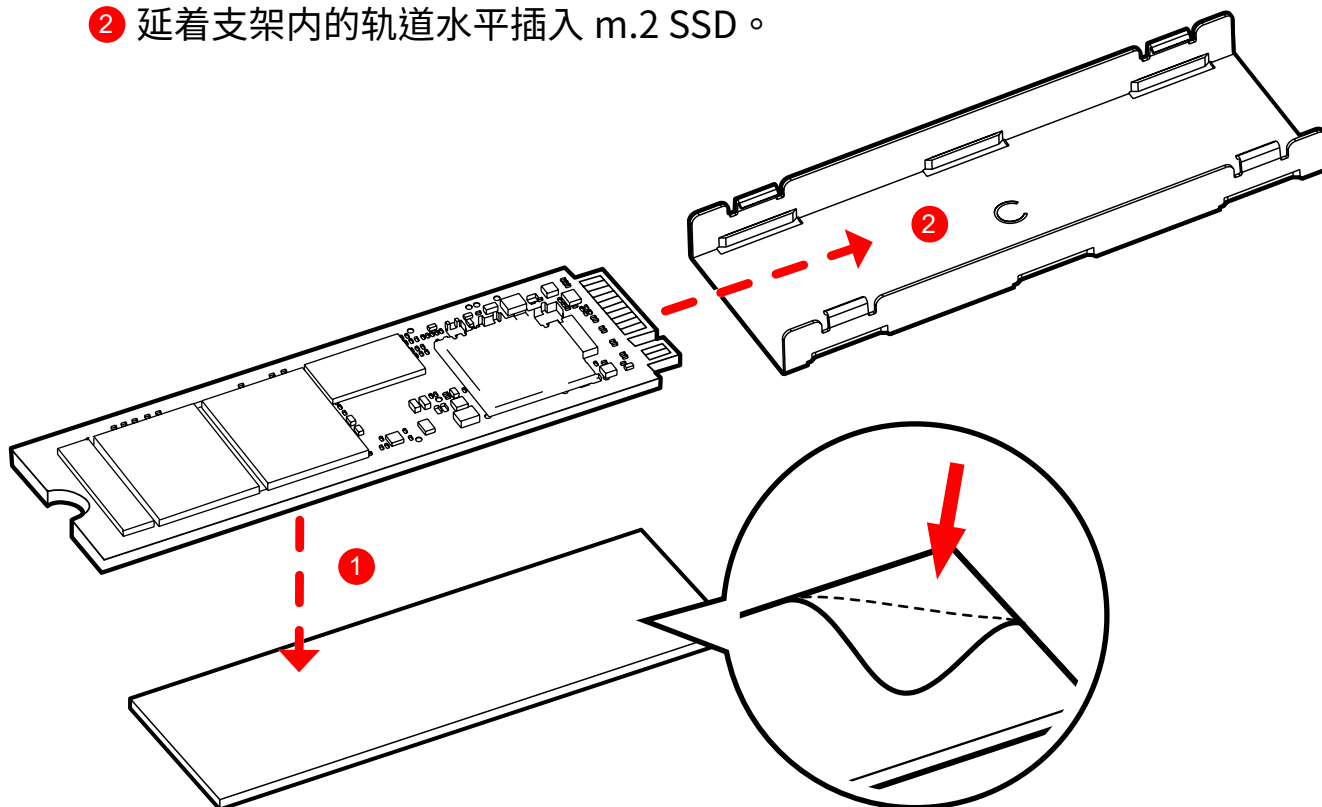


步骤 2：

将 m.2 SSD 放入支架后，请检查是否有保留左右两侧连接器和半月螺丝孔的空间。

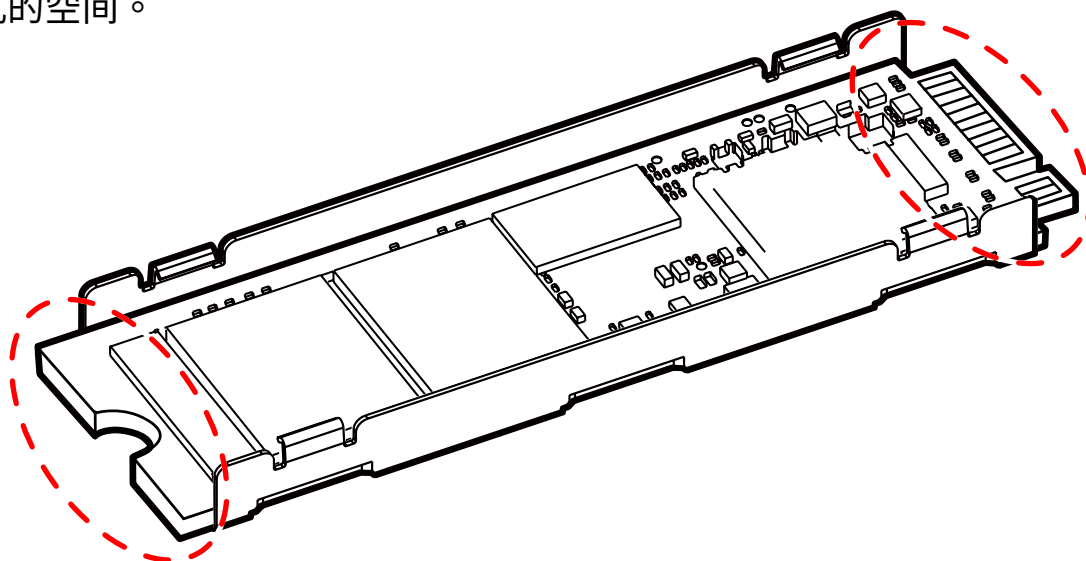


步骤 3：

撕下离型纸将散热胶黏贴到散热片上，然后撕下另一面离型纸以便固定散热片。

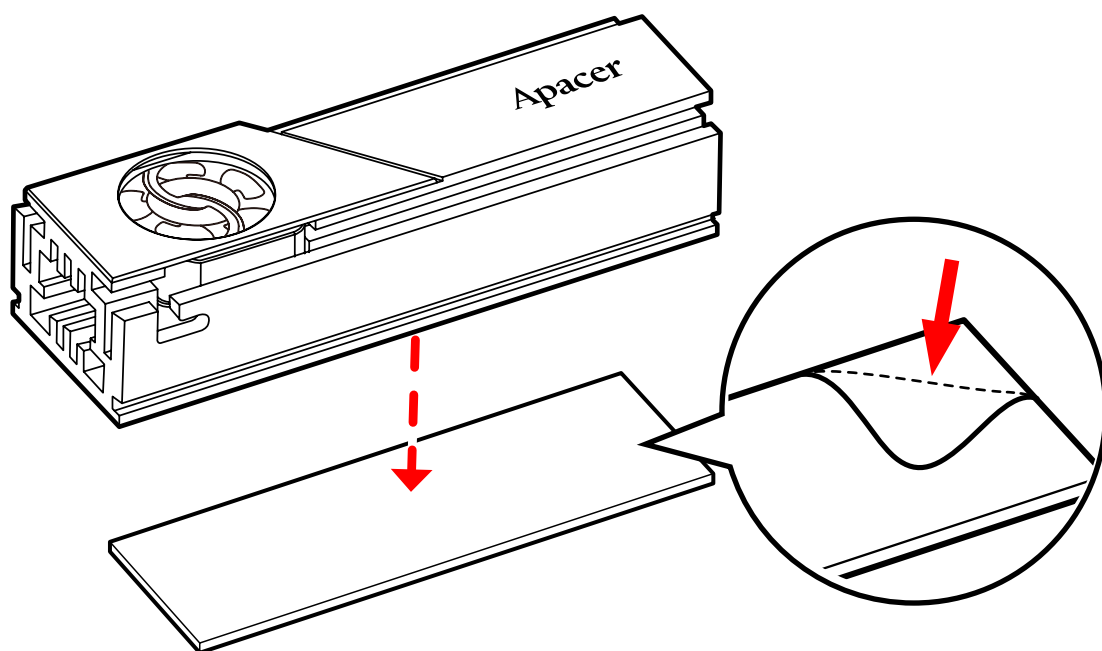


步骤 4：

将散热器放在支架上并将其与一侧对齐，运用两根手指放在散热器顶部两端，并用适当的力按下，将散热器按入支架的锁扣。

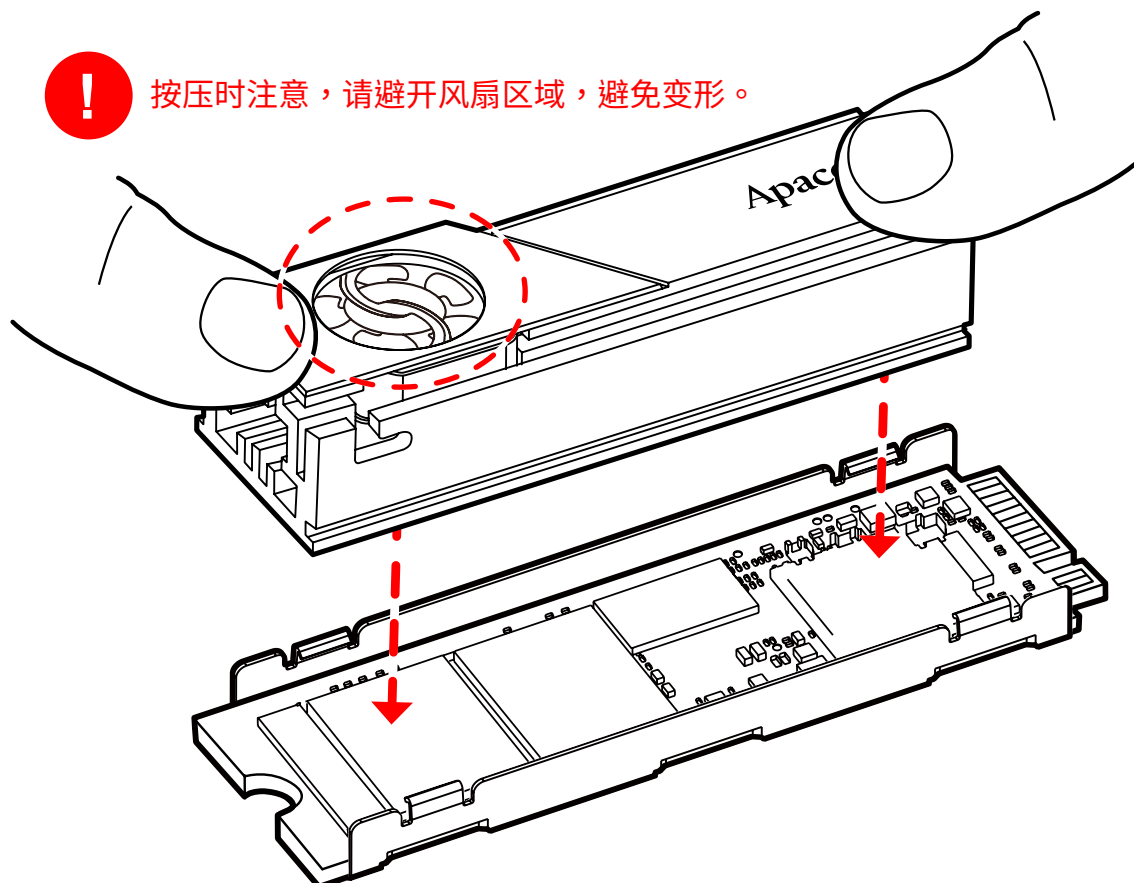

步骤 5：

检查散热器是否锁定在支架中并完成组装。

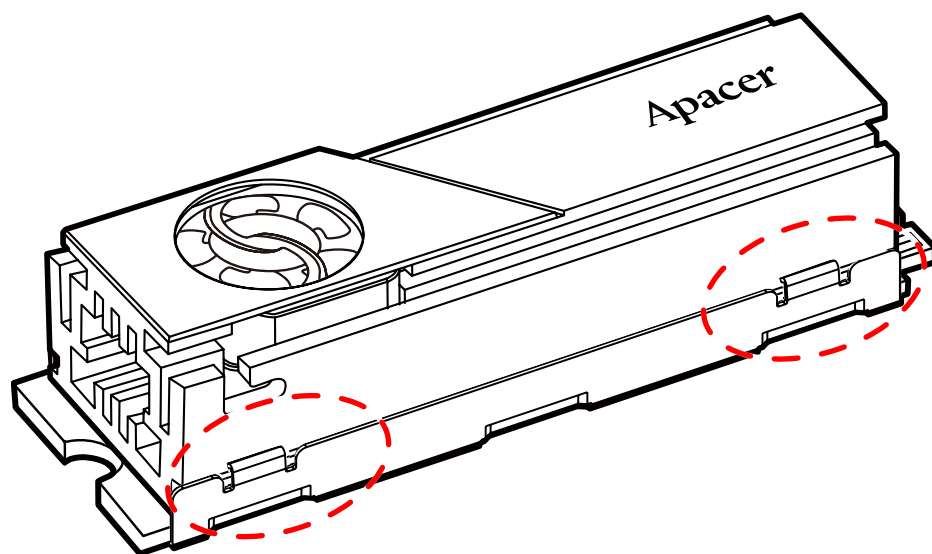


装配完成！

拆卸程序


步骤 1：

准备一个平头螺丝刀，将平头螺丝刀插入支架的一个锁扣中。

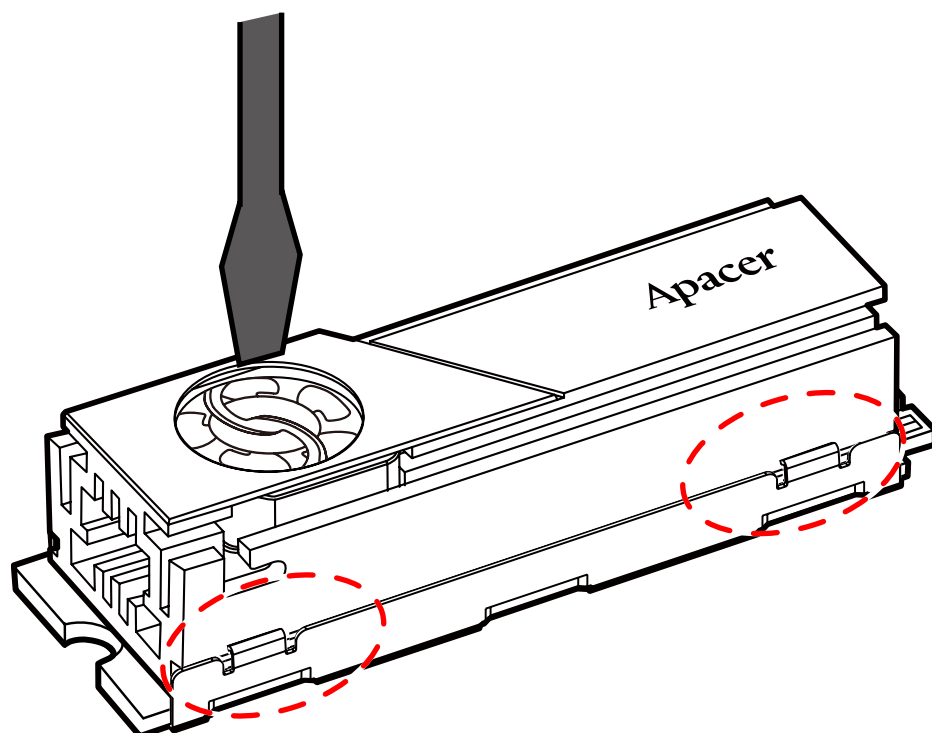


步骤 2：

轻轻地拆下支架的门锁，然后就可以顺着拆下支架的另一个门锁。

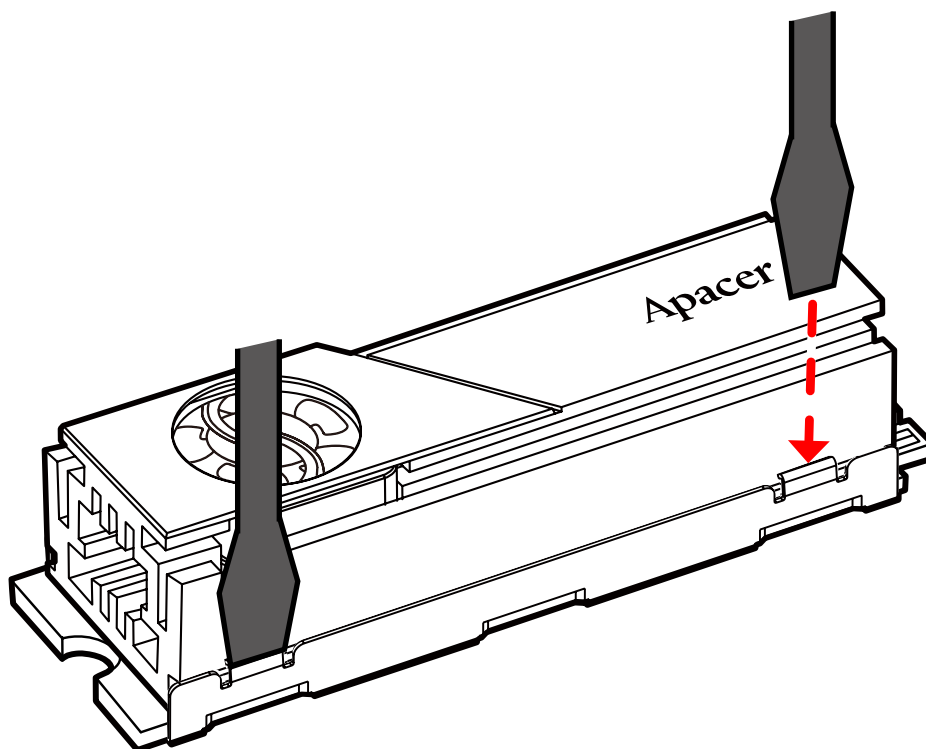

步骤 3：

完成前面的步骤后，您就可以轻轻地从支架上取下散热器。

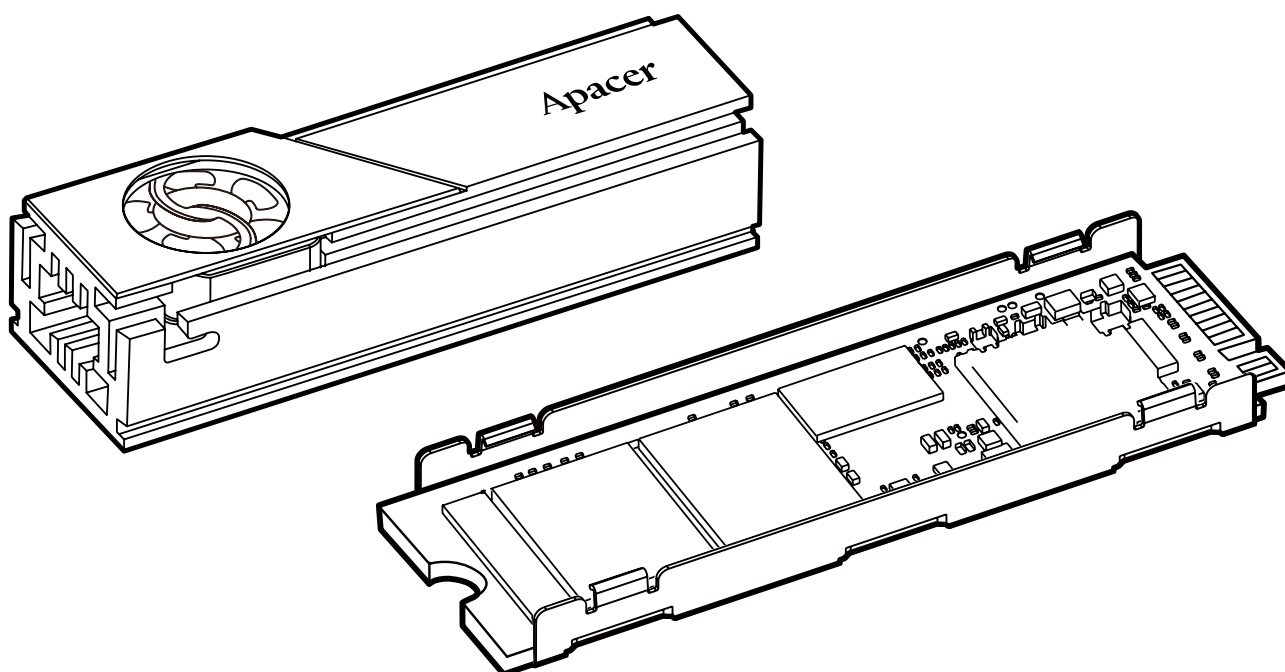

拆卸完成！

* 请注意：随附的散热器是免费的，无提供保固。

* 为确保产品达到最佳性能，请务必安装随附的散热片。此外，建议在 BIOS 中将风扇控制设置为全速。这有助于确保您的 SSD 保持最佳性能运行。

* 请正确安装散热片，并保持机箱内的通风良好，避免在高温下使用您的电脑。



The copyright on this quick guide remains with our company. No part of this quick guide may be transmitted, reproduced or changed. The product specifications, design and this quick guide's content are subject to change without notice.

www.apacer.com